

Maintenance Guide

Low Profile Hydraulic Torque Wrench

TXU Series Uni-Swivel

TXU-2, TXU-4, TXU-8, TXU-16



1.



2.



3.



4.




5.



1. Light Grease
2. Serviceable Threadlocking Compound
3. Pick or Small Flathead Screwdriver
4. 5/32" Allen Wrench
5. 3/32" Allen Wrench



Maintenance Supplies




Place the TXU
cylinder securely
into a vise as
pictured.

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com

Use the 5/32"
Allen Wrench to
remove the swivel
screw.

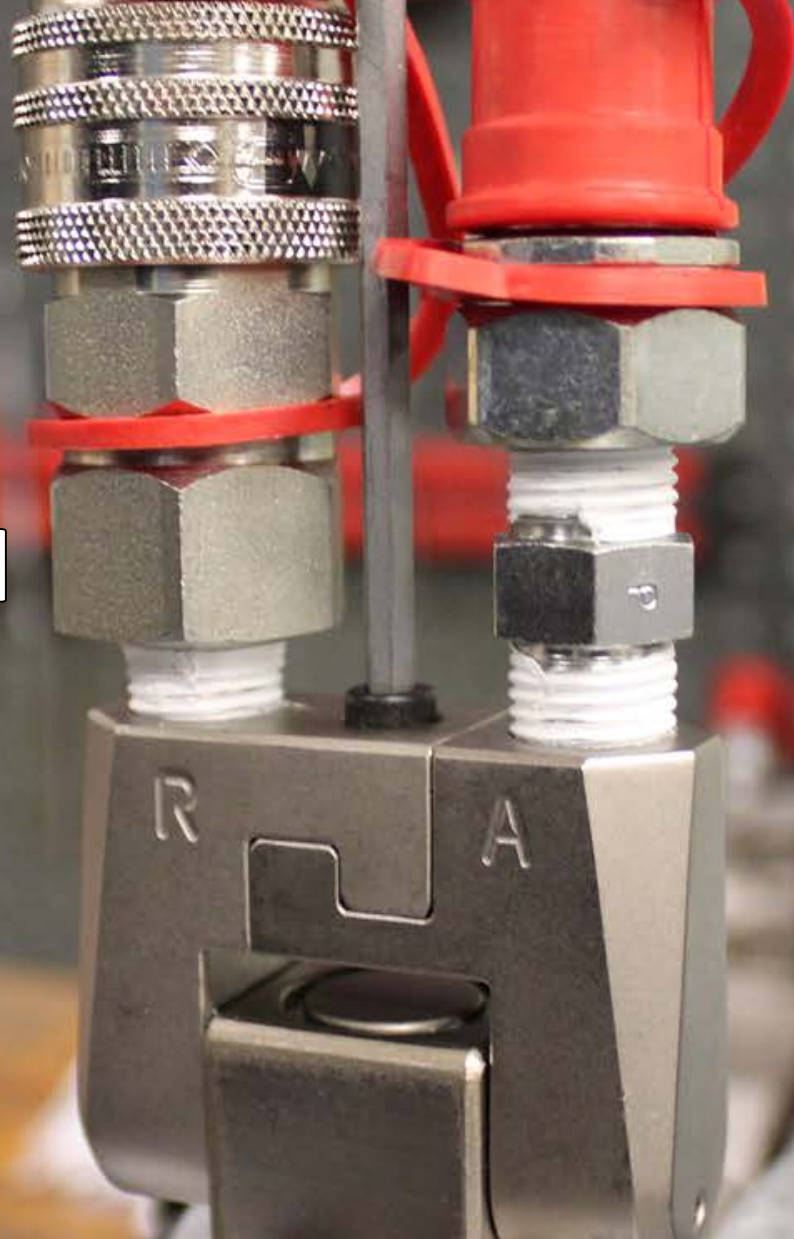


TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com

Separate the
swivels.

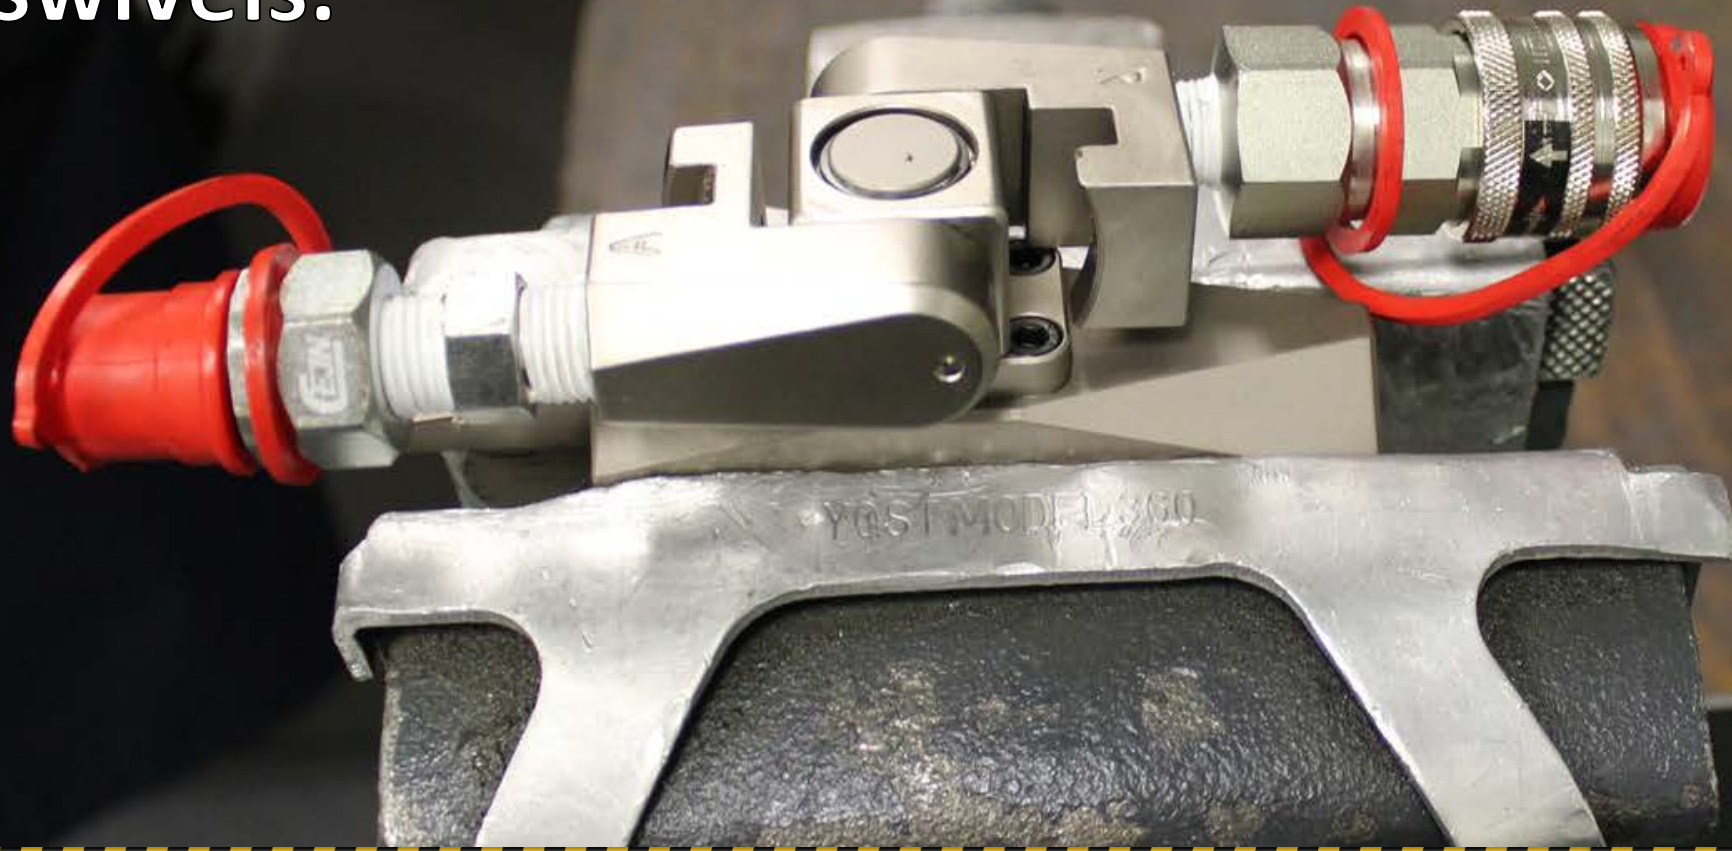


TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com


TXU-2

Use the pick or small screwdriver to remove the retaining ring.

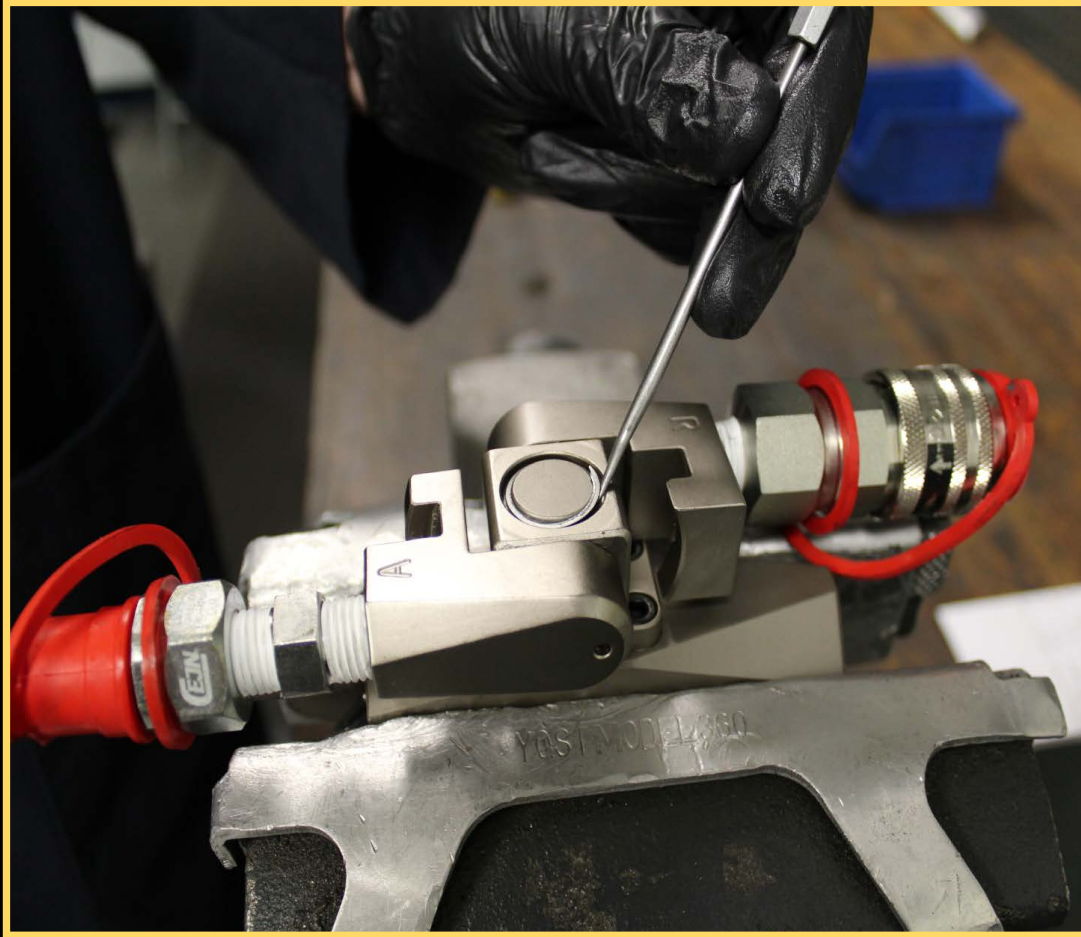

TXU-4, TXU-8, TXU-16


Use the 3/32" Allen Wrench to remove the retaining screws.

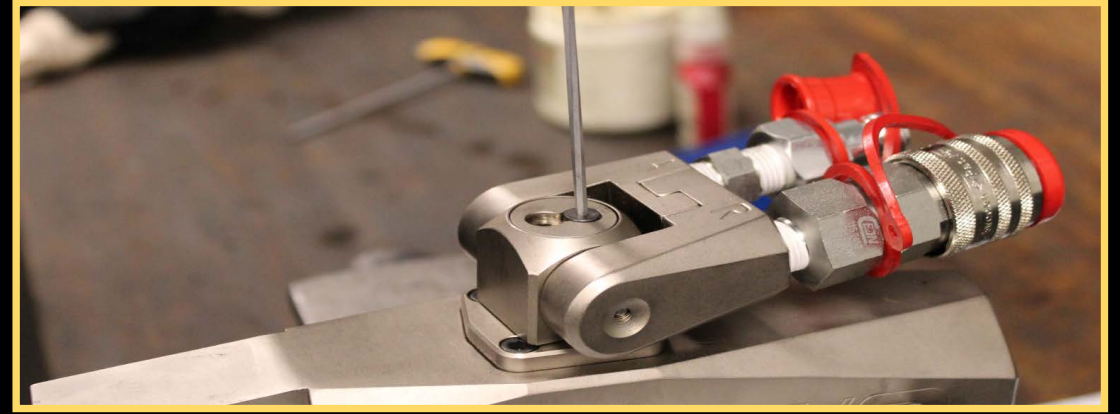

Remove the retaining cap.



Remove the
Swivel Arms.

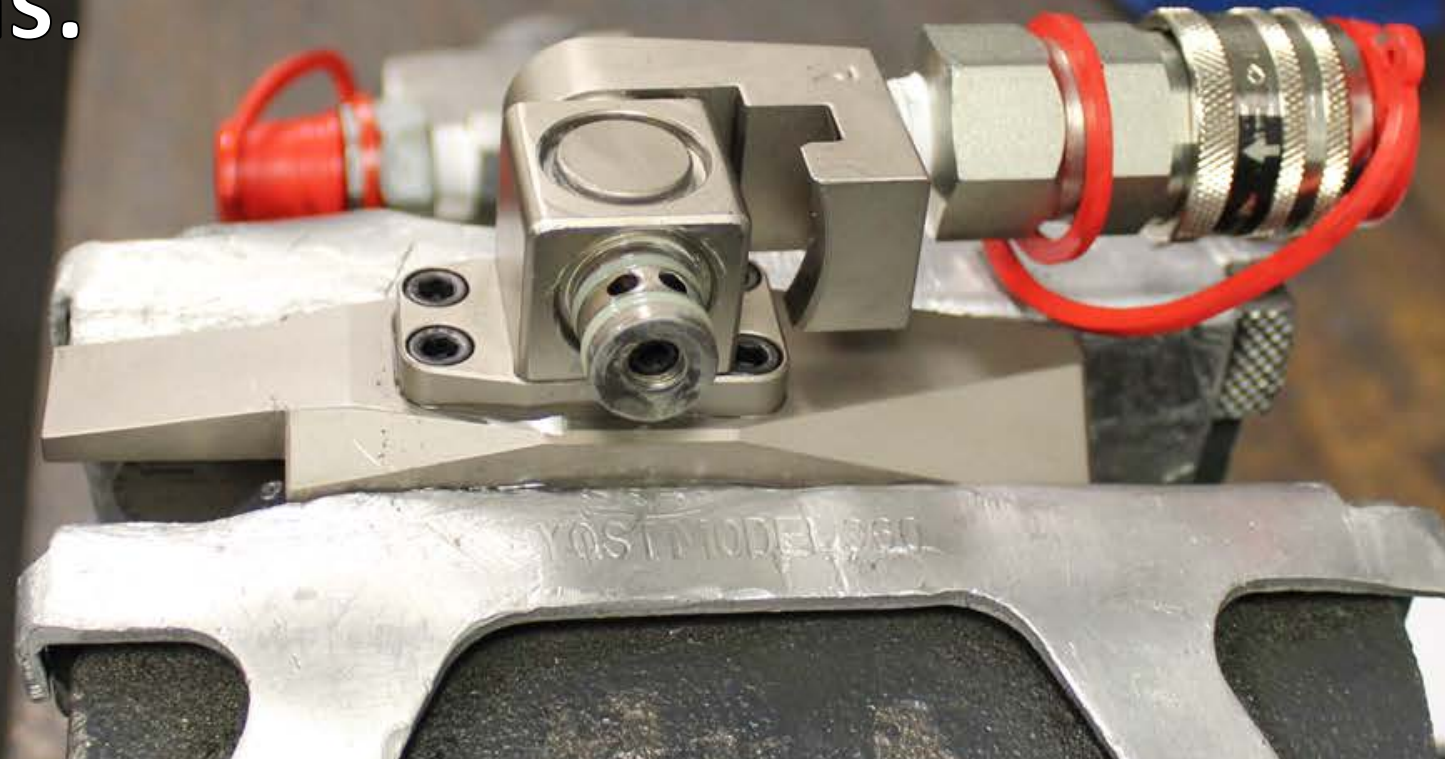

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com


Remove the joint.



TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com




Use the 5/32"
Allen Wrench to
remove the post
screws. Remove
the post.

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com

Clean and inspect ALL parts (replace any damaged or worn O-rings).

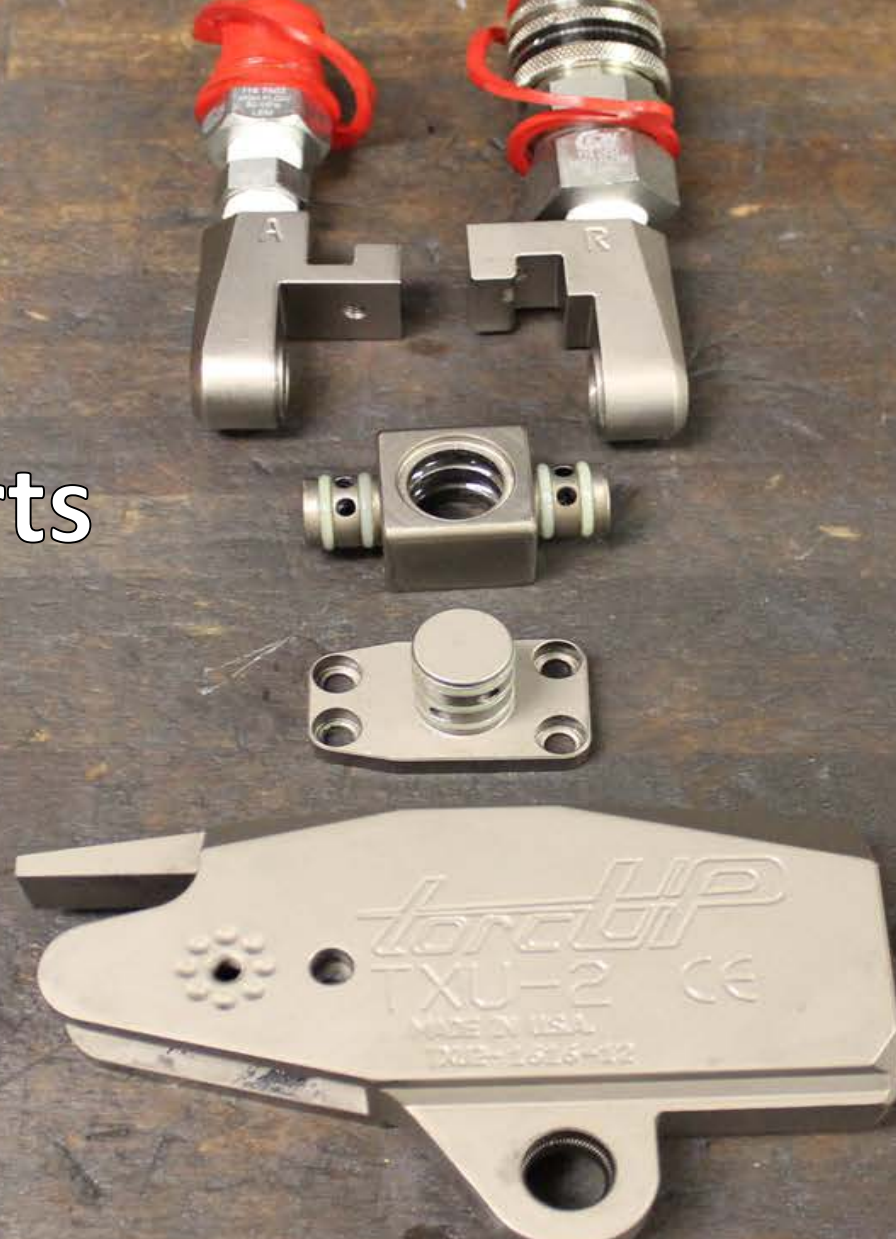

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com

Install the Swivel O-Rings



TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com

Install the post. Apply serviceable threadlocking compound to the screws. Tighten in a crossing pattern.



TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com



Lube the post.

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com



Press the
joint onto
the post.

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com


TXU-2

Install the retaining ring.



TXU-4, TXU-8, TXU-16

Install the retaining cap and screws.

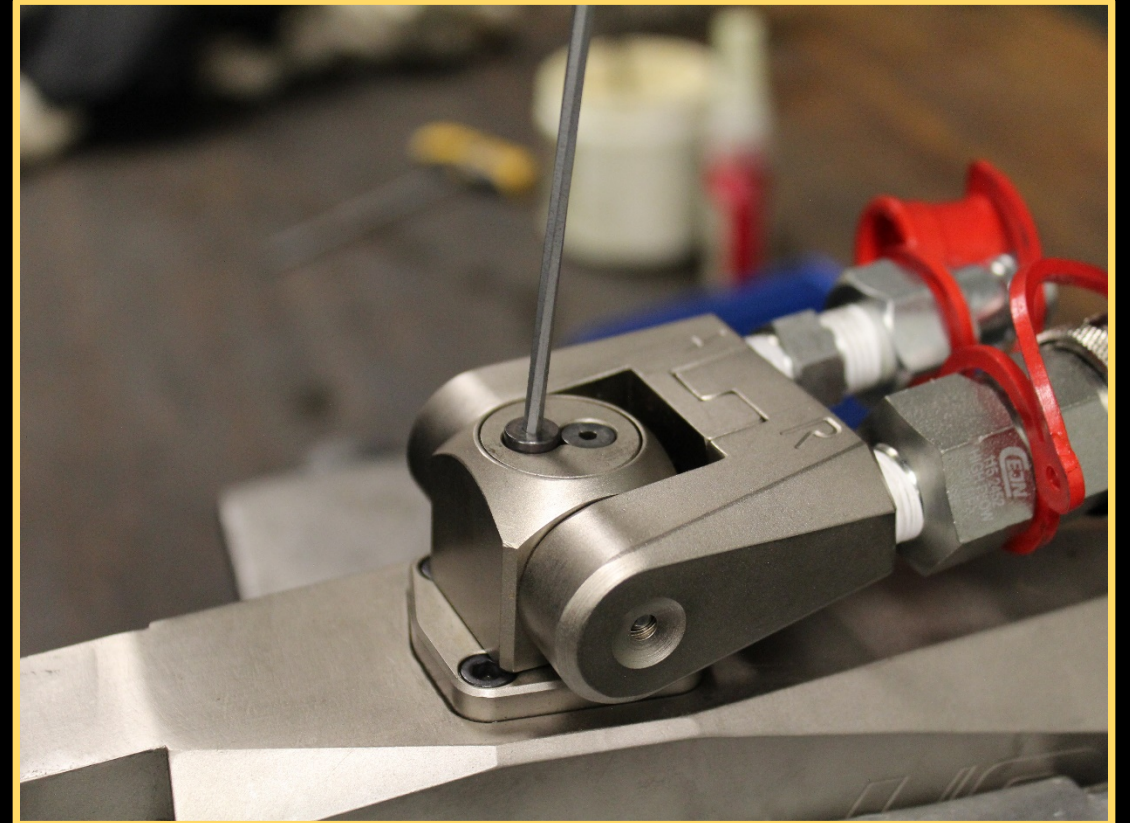

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com



Lube the
joint arms.


TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com

Note: The engraved "R" on the joint arm will match the engraved "R" on the Retract Swivel Arm.

Install the Swivel Arms

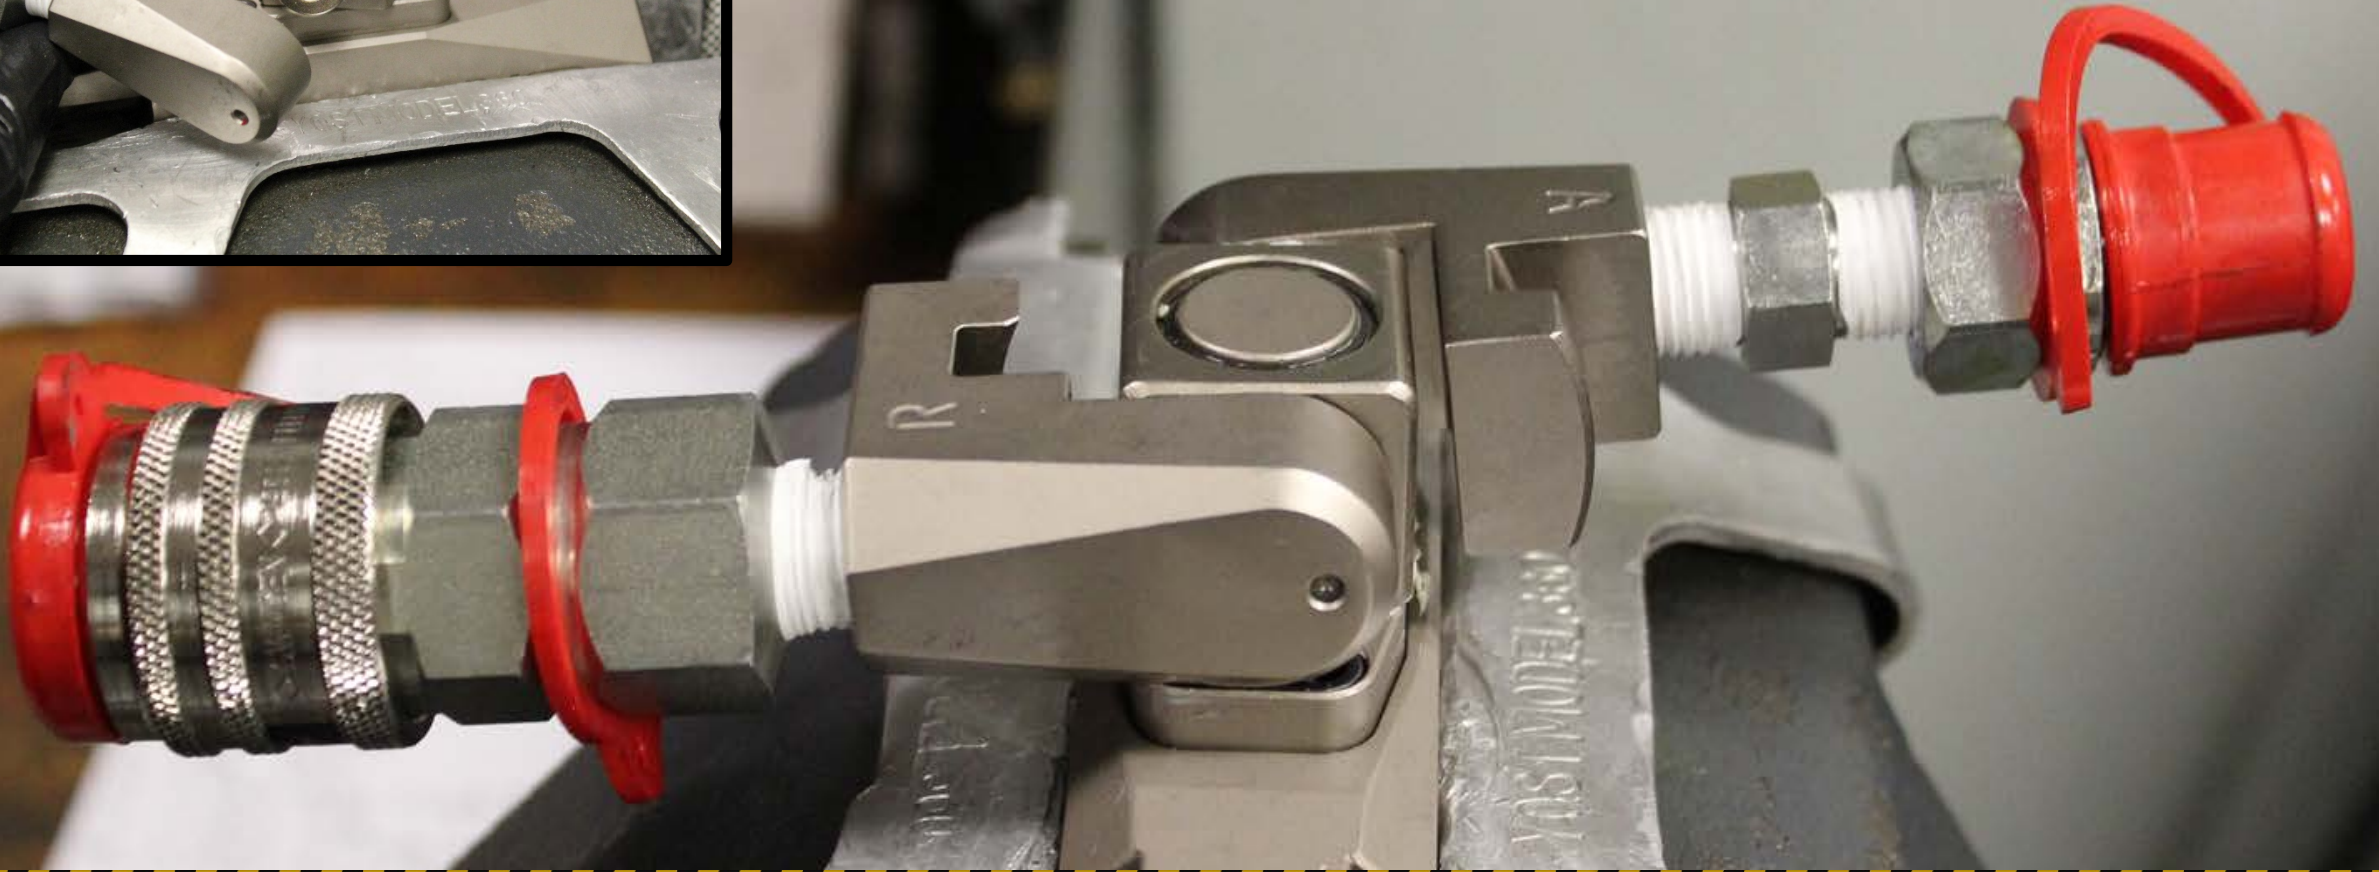

TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com



Install the
swivel screw
using the
5/32" Allen
Wrench.



TXU Low Profile Hydraulic Torque Wrenches

TorcUP
1025 Conroy Place
Easton, PA 18040

Phone: (610) 250-5800
E-mail: sales@torcup.com
Website: www.torcup.com