



TX AND TU SWIVELS INSTALLATION INSTRUCTIONS



Safety glasses and gloves should be worn at all times while installing this product.

Year: 2012 - PRESENT

ATTACHES TO: TX and TU Torcup Hydraulic Torque Wrenches

PART NUMBER:SEE PART#'s BELOW

WARNING: NEVER EXCEED YOUR TOOL MANUFACTURER'S RECOMMENDED TORQUE CAPACITY

USED FOR: These swivels allow the hydraulic hoses to rotate with unlimited rotation from hose to tool.

WARNING: Do not cross thread swivels into housing. It will cause leakage and damage the housing.

INSTALLATION TIME: 5 MIN.

THE INSTALL TIME LISTED IS FOR PROFESSIONAL INSTALLERS. IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED TORCUP REPRESENTATIVE FOR ADDITIONAL ASSISTANCE.

INSTALLATION REQUIRES:

 1/4 inch Allen Wrench		7/8 inch and 15/16 inch open end wrench
---	---	---

INSTALLATION TIPS:

1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
4. NEED HELP OR HAVE SOME QUESTIONS? CALL TECHNICAL SUPPORT AT 1-888-TORCUP-1.

LEVEL OF DIFFICULTY: EASY

EASY MODERATE CHALLENGING

NOTES:

Although the TU tool is shown, the installation of swivels on TX tools utilizes the same procedure.

PRODUCT PHOTO:



PART NUMBERS:

Must order quantity 2 for a set.

All TU sizes = STU-4M-4M

- TX-2 = STX-8M-4M
- TX-4 = STX-4M-4M
- TX-8 = STX-4M-4M
- TX-16 = STX-4M-4M
- TX-32 = STX-4M-4M

PRODUCT PHOTO:



INSTALLATION WALKTHROUGH

Step 1 TU Square Drive Hydraulic Torque Wrench shown with factory installed swivels.




Step 2 Use 1/4 inch allen wrench to remove left and right swivels.



Step 3 Use wrench to unscrew male and female from swivels.

15/16 inch female open wrench
7/8 inch male open wrench

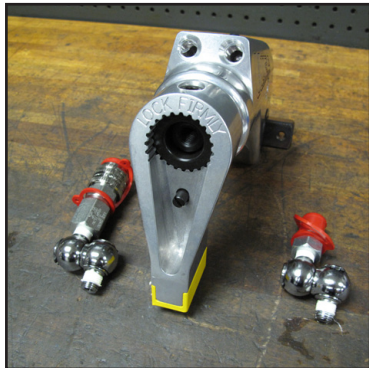

Step 4 Reverse instructions for installation of swivels.

